

По вопросам продаж и поддержки обращайтесь: [btn@nt-rt.ru](mailto:btn@nt-rt.ru)

[www.bently.nt-rt.ru](http://www.bently.nt-rt.ru)

Архангельск (8182)63-90-72,  
Астана+7(7172)727-132,  
Белгород(4722)40-23-64,  
Брянск(4832)59-03-52,  
Владивосток(423)249-28-31,  
Волгоград(844)278-03-48,  
Вологда(8172)26-41-59,  
Воронеж(473)204-51-73,  
Екатеринбург(343)384-55-89,  
Иваново(4932)77-34-06,  
Ижевск(3412)26-03-58,  
Казань(843)206-01-48,  
Калининград(4012)72-03-81,  
Калуга(4842)92-23-67,  
Кемерово(3842)65-04-62,  
Киров(8332)68-02-04,

Краснодар(861)203-40-90,  
Красноярск(391)204-63-61,  
Курск(4712)77-13-04,  
Липецк(4742)52-20-81,  
Магнитогорск(3519)55-03-13,  
Москва(495)268-04-70,  
Мурманск(8152)59-64-93,  
Набережные Челны(8552)20-53-41,  
Нижний Новгород(831)429-08-12,  
Новокузнецк(3843)20-46-81,  
Новосибирск(383)227-86-73,  
Орел(4862)44-53-42,  
Оренбург(3532)37-68-04,  
Пенза(8412)22-31-16,  
Пермь(342)205-81-47,  
Ростов-на-Дону(863)308-18-15,

Рязань(4912)46-61-64,  
Самара(846)206-03-16,  
Санкт-Петербург(812)309-46-40,  
Саратов(845)249-38-78,  
Смоленск(4812)29-41-54,  
Сочи(862)225-72-31,  
Ставрополь(8652)20-65-13,  
Тверь(4822)63-31-35,  
Томск(3822)98-41-53,  
Тула(4872)74-02-29,  
Тюмень(3452)66-21-18,  
Ульяновск(8422)24-23-59,  
Уфа(347)229-48-12,  
Челябинск(351)202-03-61,  
Череповец(8202)49-02-64,  
Ярославль(4852)69-52-93

## Описание на панель диагностики. Модель 3500/08



 
**BENTLY**  
Nevada

# 3500/08 Diagnostics Access Panel

Bently Nevada\* Asset Condition Monitoring

---

## Description



The Diagnostics Access Panel is designed for use with the Bently Nevada\* 3500 Series Machinery Protection System. While the 3500 rack provides front-panel access to all buffered transducer and Keyphasor\* outputs, there are installations for which these front-panel connections are inconvenient or impractical to use. One example is that of a 3500 rack installed in an EMI-shielded or weatherproof enclosure. The Diagnostics Access Panel enables direct access to signals from the 3500 System without opening cabinet doors and subjecting electronic equipment to the risk of EMI/RFI exposure, or other harsh environmental conditions.

The Diagnostics Access Panel connects to the 3500 System's dynamic data port through a 4.6-metre (15-foot) signal cable. A Y-cable is available so that the Diagnostic Access Panel and an external communications processor can both connect to the 3500 system through the same dynamic port. The signals available on a column of connectors will vary depending on the 3500 System configuration.

---

## Specifications

### Interface

One 3500/08 can deliver signals from six 3500 4-channel monitors and one 3500 2-channel Keyphasor Module. The Diagnostics Access Panel has one coaxial connector for each channel. The maximum cable length for use with the 3500/08 is 26 metres (85 feet).

When 3500/08 is used with a 3500/22, TDI, a Buffered Signal Output Module is required to provide access to all of the buffered signals.

---

### Environmental Limits

#### Operating Temperature

-30 °C to +65 °C (-22 °F to +150 °F)

#### Storage Temperature

-40 °C to +85 °C (-40 °F to +185 °F)

#### Humidity

95% non-condensing

---

### Physical

#### Dimensions (Height x Width x Depth):

483 mm x 152 mm x 54 mm  
(19.00 in. x 6.00 in. x 2.13 in.).

#### Weight:

1.8 kg (4.0 lb.).

---

## Ordering Information

### 3500/08 -AXX-BXX

#### A: Interface Cable Option

**00** Without interface cable  
**01** With interface cable

#### B: Y-Cable Option

**00** Without Y-cable  
**01** With Y-cable

---

## Spares

### 134577-01

3500/08 Diagnostic Access Panel

### 134668-01

Interface cable

### 134824-01

Y-cable


### 01619261

Keyphasor adapters


### 136275-01

3500/08 Diagnostic Access Panel Manual


# Graphs and Figures

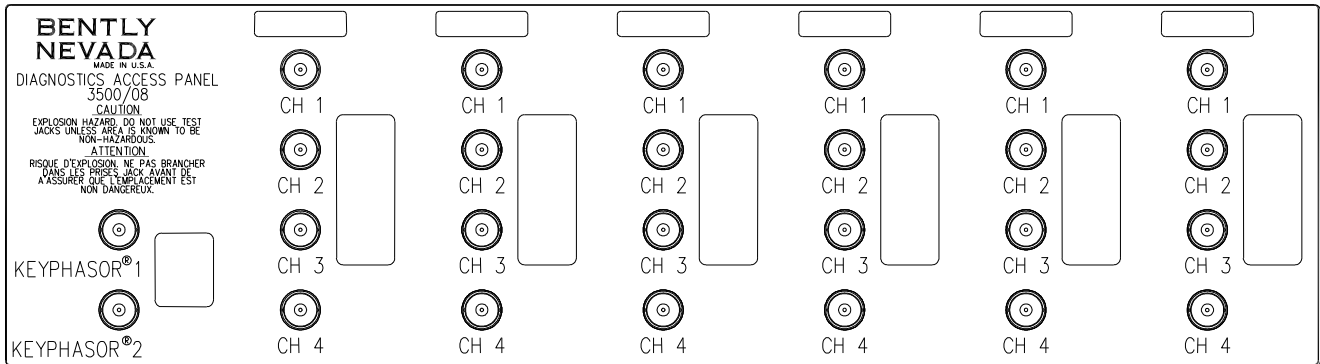 


**Figure 1: 3500/08 Front View**

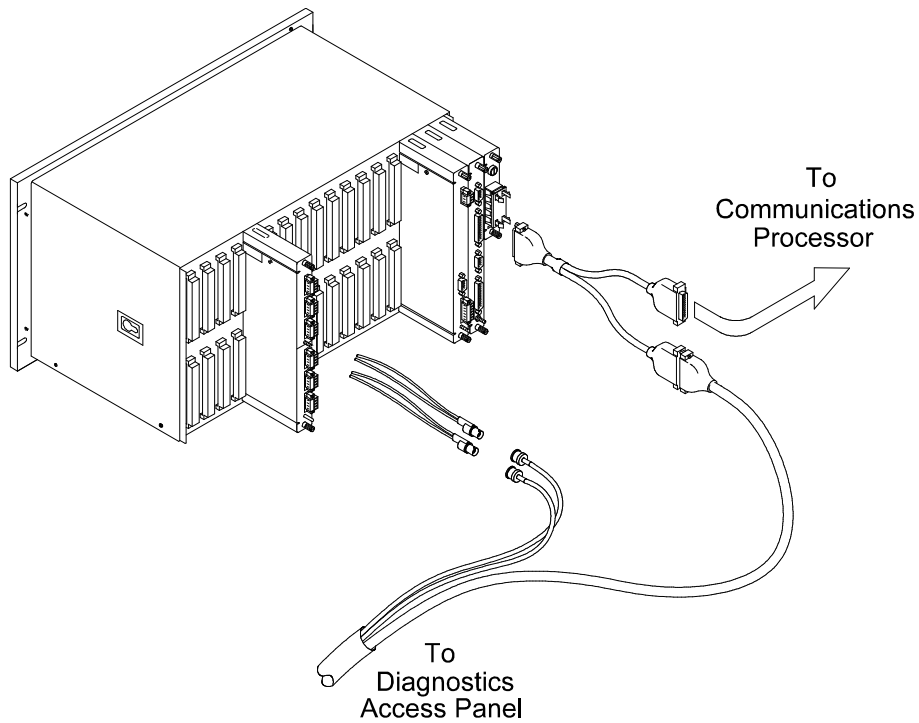 


**Figure 2: 3500 Cabling Diagram**

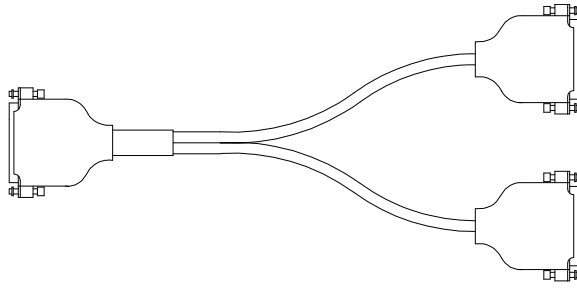 

**Figure 3: 134824-01 Y-Cable**

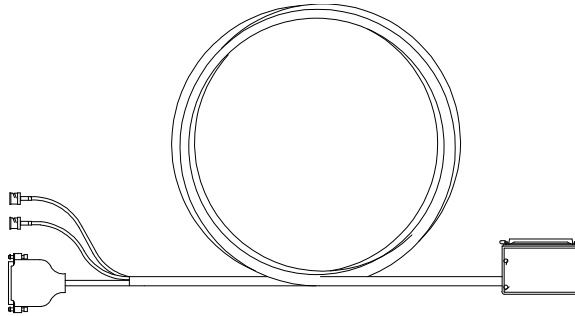 

**Figure 4: 134668-01 Interface Cable**

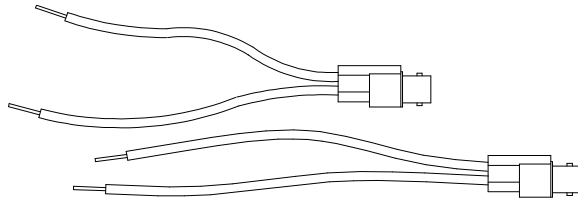 

**Figure 5: 01619261 Keyphasor Adapters**

По вопросам продаж и поддержки обращайтесь: [btn@nt-rt.ru](mailto:btn@nt-rt.ru)

[www.bently.nt-rt.ru](http://www.bently.nt-rt.ru)

Архангельск (8182)63-90-72,  
Астана+7(7172)727-132,  
Белгород(4722)40-23-64,  
Брянск(4832)59-03-52,  
Владивосток(423)249-28-31,  
Волгоград(844)278-03-48,  
Вологда(8172)26-41-59,  
Воронеж(473)204-51-73,  
Екатеринбург(343)384-55-89  
, Иваново(4932)77-34-06,  
Ижевск(3412)26-03-58,  
Казань(843)206-01-48,  
Калининград(4012)72-03-81,  
Калуга(4842)92-23-67,  
Кемерово(3842)65-04-62,  
Киров(8332)68-02-04,

Краснодар(861)203-40-90,  
Красноярск(391)204-63-61,  
Курск(4712)77-13-04,  
Липецк(4742)52-20-81,  
Магнитогорск(3519)55-03-13,  
Москва(495)268-04-70,  
Мурманск(8152)59-64-93,  
Набережные Челны(8552)20-53-41  
, Нижний Новгород(831)429-08-12,  
Новокузнецк(3843)20-46-81,  
Новосибирск(383)227-86-73,  
Орел(4862)44-53-42,  
Оренбург(3532)37-68-04,  
Пенза(8412)22-31-16,  
Пермь(342)205-81-47,  
Ростов-на-Дону(863)308-18-15,

Рязань(4912)46-61-64,  
Самара(846)206-03-16,  
Санкт-Петербург(812)309-46-40,  
Саратов(845)249-38-78,  
Смоленск(4812)29-41-54,  
Сочи(862)225-72-31,  
Ставрополь(8652)20-65-13,  
Тверь(4822)63-31-35,  
Томск(3822)98-41-53,  
Тула(4872)74-02-29,  
Тюмень(3452)66-21-18,  
Ульяновск(8422)24-23-59,  
Уфа(347)229-48-12,  
Челябинск(351)202-03-61,  
Череповец(8202)49-02-64,  
Ярославль(4852)69-52-93



**BENTLY**  
Nevada