

По вопросам продаж и поддержки обращайтесь: [btn@nt-rt.ru](mailto:btn@nt-rt.ru)

[www.bently.nt-rt.ru](http://www.bently.nt-rt.ru)

Архангельск (8182)63-90-72,  
Астана+7(7172)727-132,  
Белгород(4722)40-23-64,  
Брянск(4832)59-03-52,  
Владивосток(423)249-28-31,  
Волгоград(844)278-03-48,  
Вологда(8172)26-41-59,  
Воронеж(473)204-51-73,  
Екатеринбург(343)384-55-89  
, Иваново(4932)77-34-06,  
Ижевск(3412)26-03-58,  
Казань(843)206-01-48,  
Калининград(4012)72-03-81,  
Калуга(4842)92-23-67,  
Кемерово(3842)65-04-62,  
Киров(8332)68-02-04,

Краснодар(861)203-40-90,  
Красноярск(391)204-63-61,  
Курск(4712)77-13-04,  
Липецк(4742)52-20-81,  
Магнитогорск(3519)55-03-13,  
Москва(495)268-04-70,  
Мурманск(8152)59-64-93,  
Набережные Челны(8552)20-53-41  
, Нижний Новгород(831)429-08-12,  
Новокузнецк(3843)20-46-81,  
Новосибирск(383)227-86-73,  
Орел(4862)44-53-42,  
Оренбург(3532)37-68-04,  
Пенза(8412)22-31-16,  
Пермь(342)205-81-47,  
Ростов-на-Дону(863)308-18-15,

Рязань(4912)46-61-64,  
Самара(846)206-03-16,  
Санкт-Петербург(812)309-46-40,  
Саратов(845)249-38-78,  
Смоленск(4812)29-41-54,  
Сочи(862)225-72-31,  
Ставрополь(8652)20-65-13,  
Тверь(4822)63-31-35,  
Томск(3822)98-41-53,  
Тула(4872)74-02-29,  
Тюмень(3452)66-21-18,  
Ульяновск(8422)24-23-59,  
Уфа(347)229-48-12,  
Челябинск(351)202-03-61,  
Череповец(8202)49-02-64,  
Ярославль(4852)69-52-93

## Описание на блоки питания. Модель 3500/10E



**BENTLY**  
Nevada

# 3500/10E Power Supply

Bently Nevada\* Asset Condition Monitoring

---



## Description

The 3500 Encore Power Supplies are half height modules and must be installed in the specially designed slots on the left side of the 3500 ENCORE System rack.

Dual redundant or single 3500/10E Power Supplies are offered in the 3500 ENCORE System rack.

The 3500 ENCORE Power Supply accepts a wide range of input voltages and converts them to voltages acceptable for use by other 3500 Encore modules:

- Universal AC Input

**Note:** The /10E power supply is only for use in the 3500 ENCORE system (not for use in the 3500 ENCORE rack upgrade).



## Specifications

### Inputs

#### Voltage Options:

##### Voltage ac

Input  
Voltage

85 to 264 Vac

Input  
Frequency

47 to 63 Hz

#### Full Rack Current Draw:

##### AC

3.2 A rms (maximum).

---

### Outputs

#### Front Panel LEDs

##### Supply OK LED:

Indicates when the power supply is operating properly.

---

### Environmental Limits

#### Operating Temperature:

For an 8 or a 10 Position rack:  
-20 °C to +65°C (-4 °F to +150°F).

For a 12 Position rack:  
-20 °C to +60°C (-4 °F to +140°F).

For a 14 Position rack:  
-20 °C to +55°C (-4 °F to +131°F).

#### Storage Temperature:

-30 °C to +85 °C (-22 °F to +185 °F).

#### Humidity:

95%, non-condensing.

The power supply will support the system monitor and up to 12 additional monitors at +65°C (requires a minimum of 40 linear feet per minute of air moving across the footprint of the system directly below the Power Supply and TDI main card).

#### Altitude:

Up to 2000 m (6561.68 ft.)

#### Mains Supply:

Mains supply fluctuations up to +/-10% of the nominal voltage.

#### Overvoltage:

Overvoltage Category II.

#### Pollution:

Pollution Degree 2.

---

### Compliance and Certifications

#### EMC

European Community Directives:  
EMC Directive 2004/108/EC

##### Standards:

EN 61326-1:2006  
Emissions and Immunity  
EN 61000-6-2 (2005) +C1  
EN 61000-3-2 (2006) +A1, +A2  
EN 61000-3-3 (2008)  
EN 61000-6-4 (2007) +A1

#### Electrical Safety

##### Standards:

EN 61010-1:2010

European Community Directive:  
2006/95/EC Low Voltage

For further certification and approvals information please visit the following website:

[www.ge-mcs.com/bently](http://www.ge-mcs.com/bently)

---

### Hazardous Area Approvals

#### North American:

##### Approval Option (01)

Class 1, Div 2

Groups A, B, C, D

T4 @ Ta = -30 °C to +65 °C  
(-4 °F to +150 °F)

For further certification and approvals information please visit the following website:

[www.ge-mcs.com/bently](http://www.ge-mcs.com/bently)

---

## Physical

### Power Supply Module

#### *Dimensions (Height x Width x Depth):*

83.82 mm x 40.39 mm x 236.73 mm (3.30 in x 1.59 in x 9.32 in).

#### *Weight:*

1.81 kg (4 lb.).

### Power Input Module

#### *Dimensions (Height x Width x Depth):*

74.17 mm x 40.39 mm x 106.93 mm (2.92 in x 1.59 in x 4.21 in).

#### *Weight:*

1.45 kg (3.20 lb.).

---

## Rack Space Requirements

### Power Supply Module:

1 half-height front slot, located on the left side of the rack.

---

## Ordering Information

### 3500/10E-AXX-BXX-CXX

#### A: Power Supply Top

**01** 110/220 VAC

#### B: Power Supply Bottom

**00** None

**01** 110/220 VAC

#### C: Agency Approval Option

**00** None

**01** CSA/NRTL/C

---

## Spares

### 100M4133

AC Power Supply Module

### 100M4135

AC Power Input Module

### 100M3339-01

Power Supply Operations and Maintenance Manual

### 100M5903


Fuse 5A 250 VAC

Graphs and Figures



Power Supplies OK LED

Figure 1: Front View of the 10E Power Supply

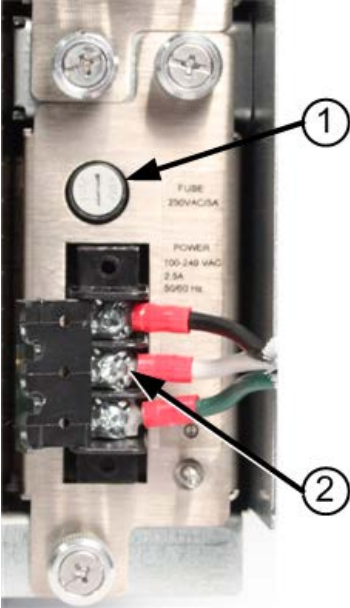

- 1. Fuse
- 2. Terminations

Figure 2: Power Input Module (PIM)

---

## Warning Markings

The warning markings that appear on the 3500/10E Power Supply are defined in this section.



Caution, possibility of electric shock



Caution, documentation must be consulted



Caution, hot surface



Protective conductor terminal

По вопросам продаж и поддержки обращайтесь: [btn@nt-rt.ru](mailto:btn@nt-rt.ru)

[www.bently.nt-rt.ru](http://www.bently.nt-rt.ru)

Архангельск (8182)63-90-72,  
Астана+7(7172)727-132,  
Белгород(4722)40-23-64,  
Брянск(4832)59-03-52,  
Владивосток(423)249-28-31,  
Волгоград(844)278-03-48,  
Вологда(8172)26-41-59,  
Воронеж(473)204-51-73,  
Екатеринбург(343)384-55-89  
, Иваново(4932)77-34-06,  
Ижевск(3412)26-03-58,  
Казань(843)206-01-48,  
Калининград(4012)72-03-81,  
Калуга(4842)92-23-67,  
Кемерово(3842)65-04-62,  
Киров(8332)68-02-04,

Краснодар(861)203-40-90,  
Красноярск(391)204-63-61,  
Курск(4712)77-13-04,  
Липецк(4742)52-20-81,  
Магнитогорск(3519)55-03-13,  
Москва(495)268-04-70,  
Мурманск(8152)59-64-93,  
Набережные Челны(8552)20-53-41  
, Нижний Новгород(831)429-08-12,  
Новокузнецк(3843)20-46-81,  
Новосибирск(383)227-86-73,  
Орел(4862)44-53-42,  
Оренбург(3532)37-68-04,  
Пенза(8412)22-31-16,  
Пермь(342)205-81-47,  
Ростов-на-Дону(863)308-18-15,

Рязань(4912)46-61-64,  
Самара(846)206-03-16,  
Санкт-Петербург(812)309-46-40,  
Саратов(845)249-38-78,  
Смоленск(4812)29-41-54,  
Сочи(862)225-72-31,  
Ставрополь(8652)20-65-13,  
Тверь(4822)63-31-35,  
Томск(3822)98-41-53,  
Тула(4872)74-02-29,  
Тюмень(3452)66-21-18,  
Ульяновск(8422)24-23-59,  
Уфа(347)229-48-12,  
Челябинск(351)202-03-61,  
Череповец(8202)49-02-64,  
Ярославль(4852)69-52-93



**BENTLY**  
Nevada