

По вопросам продаж и поддержки обращайтесь: [btn@nt-rt.ru](mailto:btn@nt-rt.ru)

[www.bently.nt-rt.ru](http://www.bently.nt-rt.ru)

Архангельск (8182)63-90-72,  
Астана+7(7172)727-132,  
Белгород(4722)40-23-64,  
Брянск(4832)59-03-52,  
Владивосток(423)249-28-31,  
Волгоград(844)278-03-48,  
Вологда(8172)26-41-59,  
Воронеж(473)204-51-73,  
Екатеринбург(343)384-55-89,  
Иваново(4932)77-34-06,  
Ижевск(3412)26-03-58,  
Казань(843)206-01-48,  
Калининград(4012)72-03-81,  
Калуга(4842)92-23-67,  
Кемерово(3842)65-04-62,  
Киров(8332)68-02-04,

Краснодар(861)203-40-90,  
Красноярск(391)204-63-61,  
Курск(4712)77-13-04,  
Липецк(4742)52-20-81,  
Магнитогорск(3519)55-03-13,  
Москва(495)268-04-70,  
Мурманск(8152)59-64-93,  
Набережные Челны(8552)20-53-41,  
Нижний Новгород(831)429-08-12,  
Новокузнецк(3843)20-46-81,  
Новосибирск(383)227-86-73,  
Орел(4862)44-53-42,  
Оренбург(3532)37-68-04,  
Пенза(8412)22-31-16,  
Пермь(342)205-81-47,  
Ростов-на-Дону(863)308-18-15,

Рязань(4912)46-61-64,  
Самара(846)206-03-16,  
Санкт-Петербург(812)309-46-40,  
Саратов(845)249-38-78,  
Смоленск(4812)29-41-54,  
Сочи(862)225-72-31,  
Ставрополь(8652)20-65-13,  
Тверь(4822)63-31-35,  
Томск(3822)98-41-53,  
Тула(4872)74-02-29,  
Тюмень(3452)66-21-18,  
Ульяновск(8422)24-23-59,  
Уфа(347)229-48-12,  
Челябинск(351)202-03-61,  
Череповец(8202)49-02-64,  
Ярославль(4852)69-52-93

## Описание на осциллографы. Модель ТК21




**BENTLY**  
Nevada

# TK21 Oscilloscope Interface

## Bently Nevada™ Asset Condition Monitoring

---

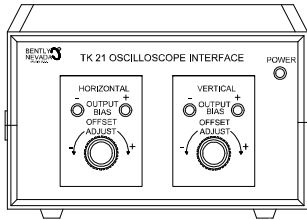

### Description

The TK21 Oscilloscope Interface allows most dual-channel oscilloscopes with a Z-axis input to perform diagnostics on rotating machinery. The interface receives signals from XY and Keyphasor® proximity transducers and allows the oscilloscope to provide an orbit presentation from these signals.

Using the TK21 with an oscilloscope enhances machinery diagnostic capabilities by allowing the user to view vibration, position, and phase information.

The TK21 works with oscilloscopes that have a Z-axis (sometimes referred to as an external blanking) input. The oscilloscope must also have the capability to display X versus Y. The factory settings for the Keyphasor gain and offset in the TK21 ensure compatibility with most Tektronix® oscilloscopes. The user can easily adjust these settings to suit any oscilloscope. We recommend using analog oscilloscopes with the TK21.

---

## Specifications

### Inputs

#### Power Requirements

##### 110 Vac option:

95 to 125 Vac, 50 or 60 Hz, single phase.

##### 220 Vac option:

190 to 275 Vac, 50 or 60 Hz, single phase.

#### Input Current

##### 110 Vac option:

50 mA maximum.

##### 220 Vac option:

25 mA maximum.

#### Fuse

##### 110 Vac option:

100 mA 250 Vac (time-delay).

##### 220 Vac option:

60 mA 250 Vac (time-delay).

---

### Signal Inputs/Outputs

All signal inputs and outputs use standard BNC connections.

#### Transducer and Keyphasor inputs:

Maximum input signal range is  $\pm 24$  Vdc.

#### Transducer Outputs

##### Minimum output bias adjustment range with 0 volts input signal with output connected to 10 K ohm load:

+12 Vdc to -12 Vdc.

##### dc gain with output connected to 10 K ohm load:

0.995 to 0.985.

##### Signal offset:

5 mV maximum.

##### Keyphasor® output

##### Gain adjustment range:

Approximately +3 to -3.  
Factory setting at -0.12 to interface with Z-axis input on most Tektronix® oscilloscopes.

##### dc offset adjustment range:

+12 Vdc to -12 Vdc.  
Factory setting at +2.5 Vdc to interface with Z-axis input on most Tektronix® oscilloscopes.

##### High pass filter corner:

100 Hz to 110 Hz.

---

### Environmental Limits

#### Temperature:

+0°C to +45°C (+32°F to +113°F).

---

### Physical

#### Size

##### Height:

86 mm (3.4 in)

##### Width:

150 mm (6.0 in)

##### Depth:

158 mm (6.2 in)

##### Weight:

0.9 kg (2.0 lb)

---

### Ordering Information

#### 134118-01

TK21 Oscilloscope Interface with User Manual.

#### 134494-01

Additional User Manuals for the TK21 Oscilloscope Interface.

---

**Accessories****123266-01**

Coaxial Cable Kit includes 4 cables with length of 1.5 metres (5 feet) each.

**02211505**

Single coaxial cable with length of 1.5 metres (5 feet).

**107564-01**

Single coaxial cable with length of 0.93 metres (3 feet).

# Graphs and Figures

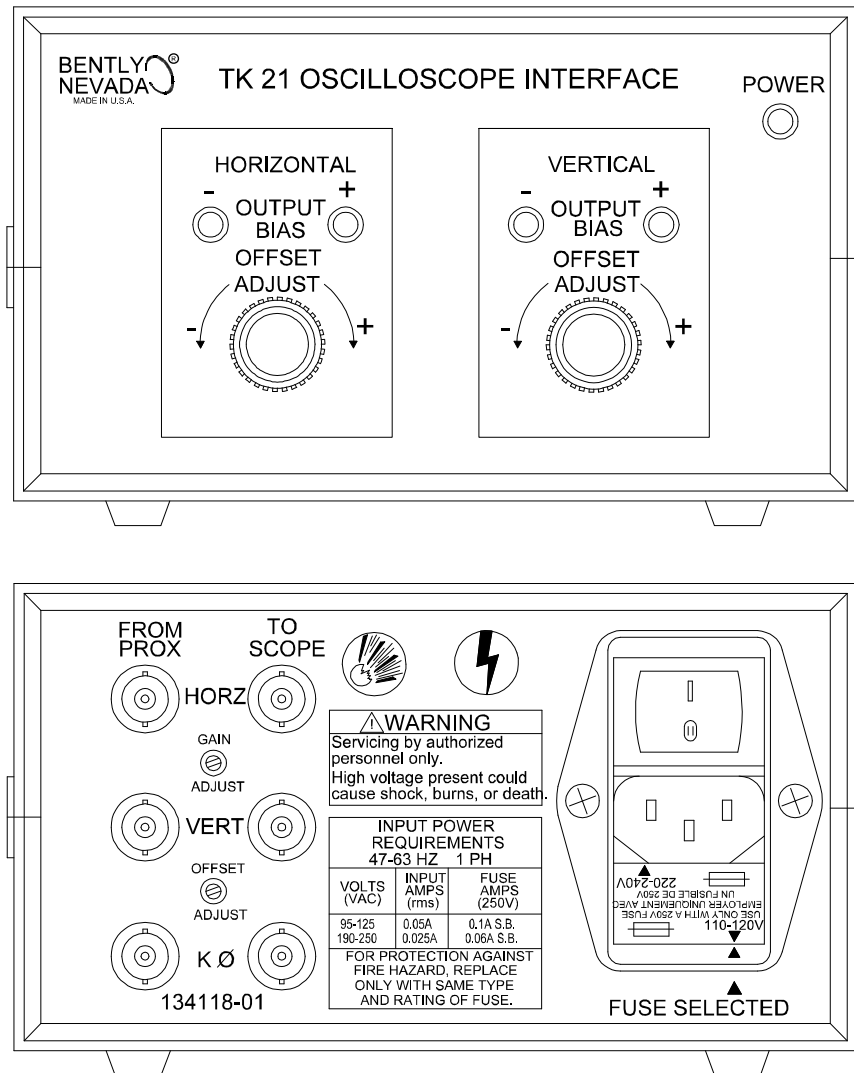


Figure 1: Front and rear view of the TK21 Oscilloscope Interface

По вопросам продаж и поддержки обращайтесь: [btn@nt-rt.ru](mailto:btn@nt-rt.ru)

[www.bently.nt-rt.ru](http://www.bently.nt-rt.ru)

Архангельск (8182)63-90-72,  
Астана+7(7172)727-132,  
Белгород(4722)40-23-64,  
Брянск(4832)59-03-52,  
Владивосток(423)249-28-31,  
Волгоград(844)278-03-48,  
Вологда(8172)26-41-59,  
Воронеж(473)204-51-73,  
Екатеринбург(343)384-55-89  
, Иваново(4932)77-34-06,  
Ижевск(3412)26-03-58,  
Казань(843)206-01-48,  
Калининград(4012)72-03-81,  
Калуга(4842)92-23-67,  
Кемерово(3842)65-04-62,  
Киров(8332)68-02-04,

Краснодар(861)203-40-90,  
Красноярск(391)204-63-61,  
Курск(4712)77-13-04,  
Липецк(4742)52-20-81,  
Магнитогорск(3519)55-03-13,  
Москва(495)268-04-70,  
Мурманск(8152)59-64-93,  
Набережные Челны(8552)20-53-41  
, Нижний Новгород(831)429-08-12,  
Новокузнецк(3843)20-46-81,  
Новосибирск(383)227-86-73,  
Орел(4862)44-53-42,  
Оренбург(3532)37-68-04,  
Пенза(8412)22-31-16,  
Пермь(342)205-81-47,  
Ростов-на-Дону(863)308-18-15,

Рязань(4912)46-61-64,  
Самара(846)206-03-16,  
Санкт-Петербург(812)309-46-40,  
Саратов(845)249-38-78,  
Смоленск(4812)29-41-54,  
Сочи(862)225-72-31,  
Ставрополь(8652)20-65-13,  
Тверь(4822)63-31-35,  
Томск(3822)98-41-53,  
Тула(4872)74-02-29,  
Тюмень(3452)66-21-18,  
Ульяновск(8422)24-23-59,  
Уфа(347)229-48-12,  
Челябинск(351)202-03-61,  
Череповец(8202)49-02-64,  
Ярославль(4852)69-52-93



**BENTLY**  
Nevada